


INSTALLATION INSTRUCTIONS
Models NT-50SS, NT-30SS and PL-45
NO-TANK with Constant Pressure Pump (Variable Speed)

Inspect NO-TANK for damage and proper tank pressure.

Following are a few simple suggested steps

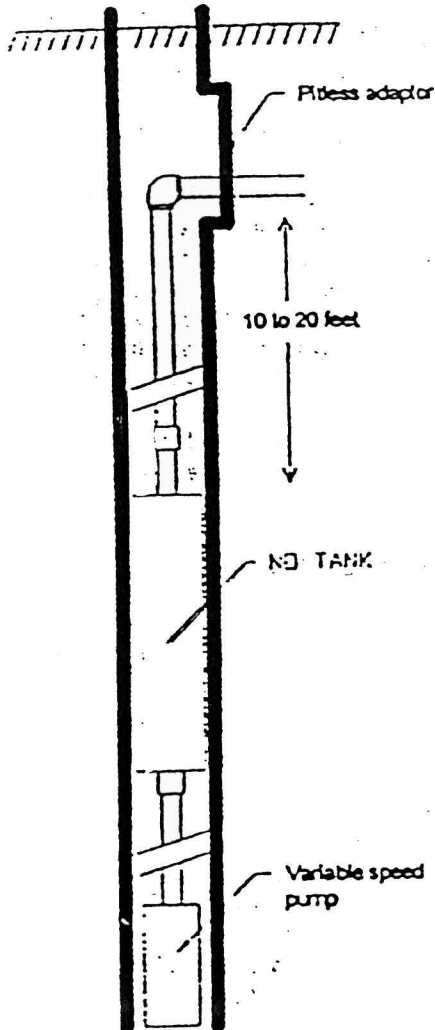

1. Determine operating pressure of water system and adjust air pressure in **NO-TANK** to pump manufacturers recommended pre-charge.
2. Pump is set in the well and wired to manufacturers recommendations.
3. **NO-TANK** should be located in pump drop pipe 5' to 20' below the pitless adaptor. This will allow the tank to be centered in the well.
4. Install the pressure transducer either at the well or in the home in accordance with pump manufacturers instructions. If there is reference to the transducer being with-in 6' of pressure tank, disregard. Since **NO-TANK** is directly in line there is no danger of water hammer.
5. Complete piping in accordance with all plumbing and electrical codes.
6. Start system.
7. At start-up, pump may not function properly until all air is removed from system. Cycle pump several times before any adjustments are made. Once pump is running normally adjust to desired pressure.
8. Attach information tag supplied to main shut off valve or electrical wire in well.

Thank you for installing the **NO-TANK**. If you have any questions call:

IN-WELL TECHNOLOGIES
1 866 560-2867